
 


# H A

Pressure-maintaining valve 5610

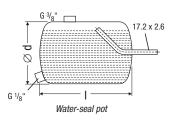



Schematic installation diagram

## **Application**

**Type 5610** Pressure-maintaining valve for maintaining upstream pressures independent of downstream pressures for use with steam, gases and liquids.

### Design

The pressure-maintaining valve is a self-acting proportional controller with single-seat and balanced valve.

The pressure-maintaining valve consists of a body with internals, bellows, spring, handwheel and actuator. For steam and liquids at temperatures above  $100\,^{\circ}\text{C}$  a water-seal pot is required to protect the actuator diaphragm.

# Dimensions [mm] and Weights [kg] of Valve Body

DN	15	20	25	32	40	50	65	80	100
L	130	150	160	180	200	230	290	310	350
Н	405	405	405	410	425	495	500	590	590
Approx. weight	10	11	12	14	18	23	35	48	70

## Dimensions [mm] and Weights [kg] of Actuator

Actuator	A11	A2	A3	A4	A51	B11	B2
Ø A	150	160	195	270	355	150	160
h <sub>1</sub>	90	100	100	120	165	90	110
Approx. weight	2.8	4.5	6.0	4.5	10	3.5	5.5

# Dimensions [mm] and Weights [kg] of Water-Seal Pot

Size	I	d	Size DN	Weight
1	206	88.9	15 – 65	1.7
2	172	152.4	80 – 100	4.9

