

Mounting the OEM Model 106 Ozone Monitor

The circuit board has four holes for mounting the ozone monitor to standoffs below the instrument (Figure 1). The holes are for #6 machine screws. Use insulating screws and washers to mount the instrument if mounting to something that is not grounded, otherwise use stainless steel screws and washers for three of the holes, and a plastic washer for the hole by the select switch (see below).

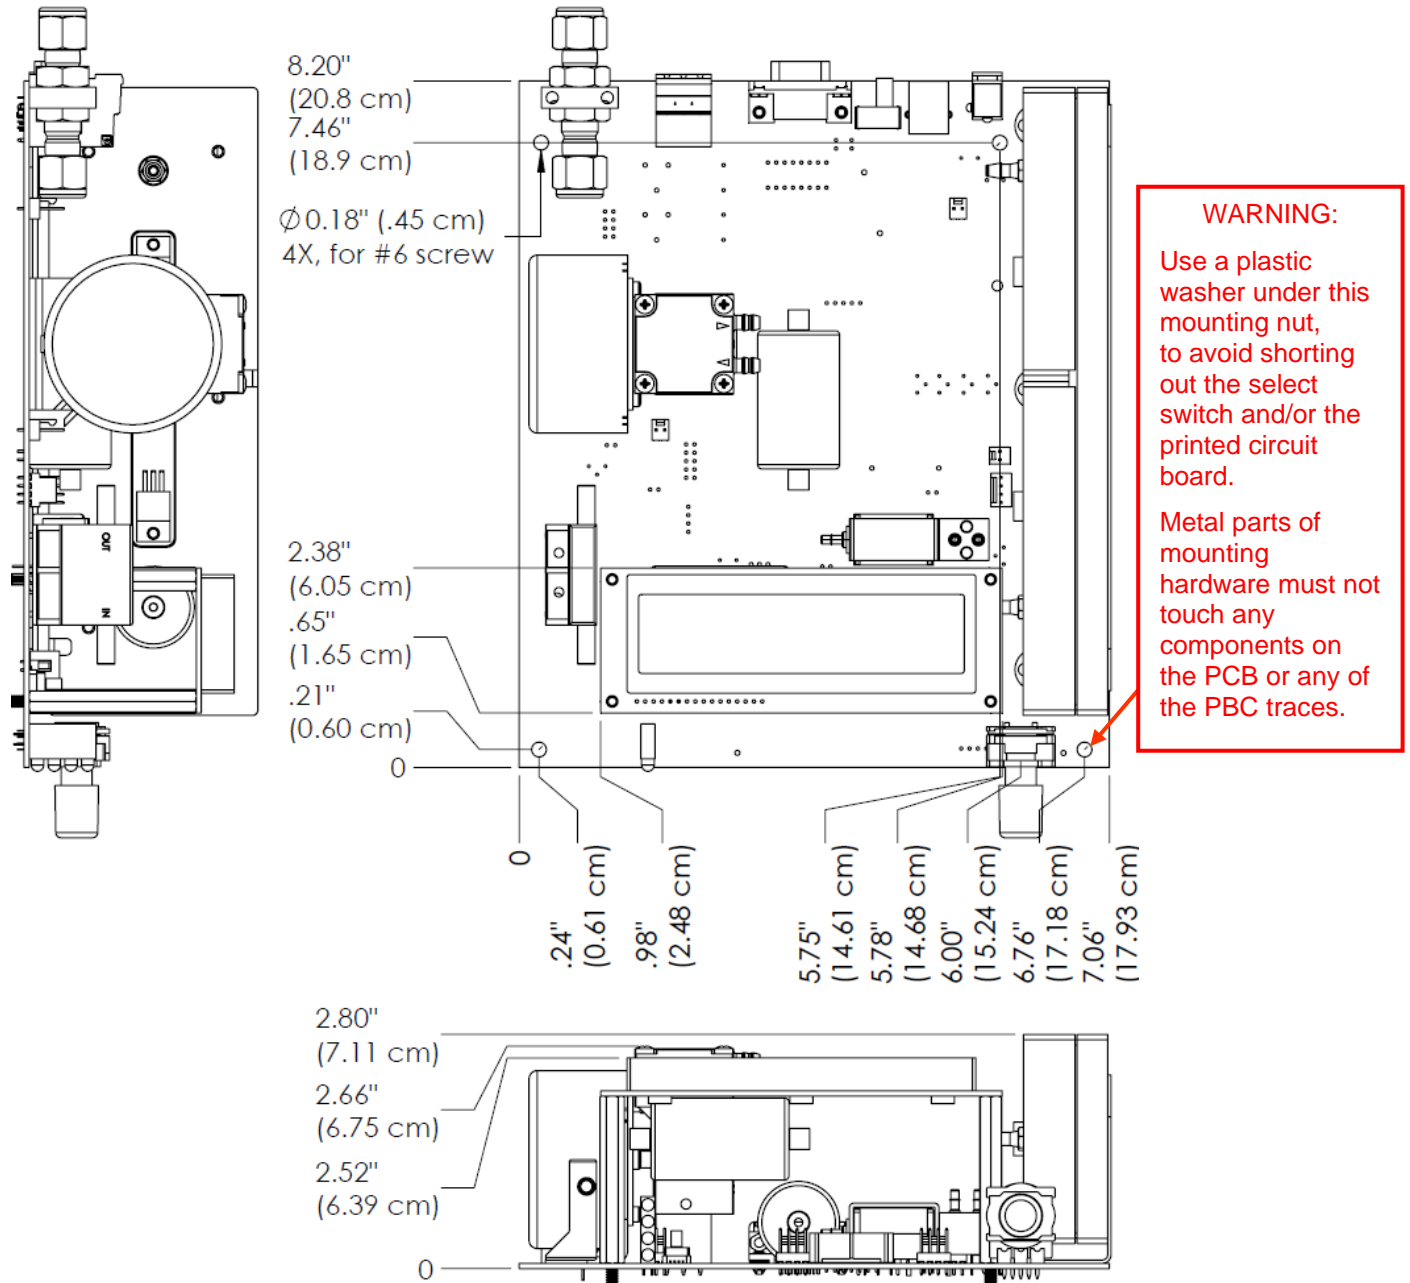


Figure 1. OEM Dimensions and Mounting Holes.